

BREEZELINE STREAM TV

Remote Essentials

For Standard & Multifunction Stream TV remotes



 
breezeline
Internet. TV. Mobile.

Standard Stream TV Remote

The Fast Forward, Rewind, and Pause/Play functions will appear on your TV screen. Use the middle buttons (OK/Select, LEFT, RIGHT) on your remote control to operate those on-screen functions while watching video.

TIP

- Push the **EXIT** button while watching **LIVE TV** to go to the Last Channel you viewed
- Push the **INFO (i)** button while watching **LIVE TV** to **RECORD** the show you are watching (Cloud DVR service required)

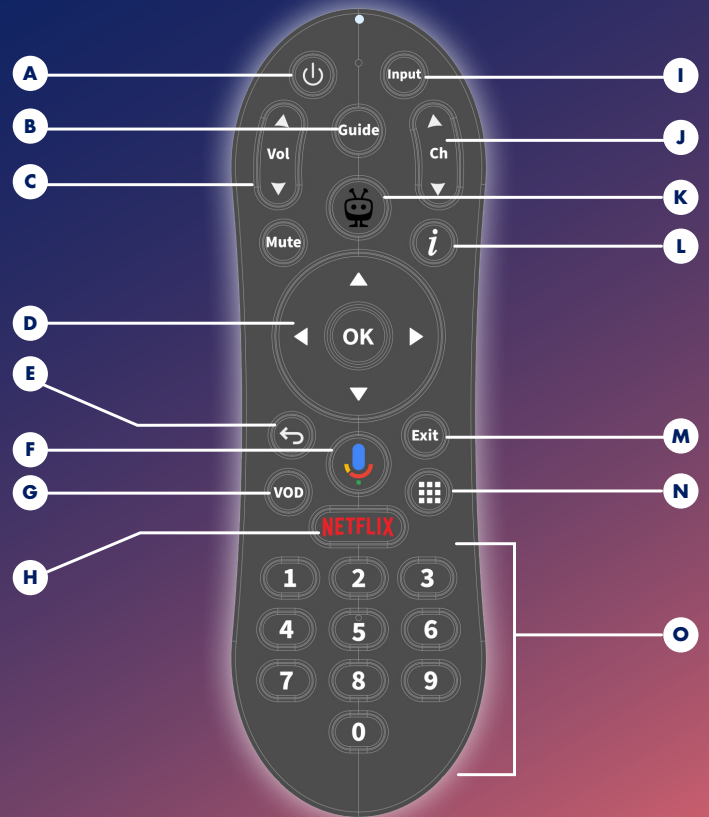


Buttons light up in the dark.

- A POWER** turns the television on/off.
- B GUIDE** takes you to the program guide.
- C VOL** and **MUTE** control the TV audio.
- D** While navigating the TiVo menus:
 - Use **UP**, **DOWN**, **LEFT**, or **RIGHT** to move around the screen.
 - The center button (**OK/Select**) chooses menu items.
 - While watching video:
 - **DOWN** displays the Info banner.
 - **UP** opens the mini guide.
 - **OK/SELECT** brings up Trick Play controls. With Trick Play controls visible:
 - **DOWN** opens the Continue Watching and Favorite Channels panels.
- E BACK** starts full-screen video on the Home screen, and goes back to the previous screen on other menus.
- F** Press and release the Google Assistant button to talk to Google.
- G VOD** goes directly to the On Demand library.
- H** The **NETFLIX** button launches Netflix.
- I INPUT** changes your video source (Stream TV Box, gaming, etc).
- J CH UP/DOWN** changes the channel or moves you quickly through the lists and the guide.
- K** The TiVo button takes you to the Home Screen.
- L INFO (i)** brings up the full Info banner while watching a show with options to Record, Bookmark, Change Audio Track, etc.
- M EXIT** switches to full-screen video while using TiVo menus, or jumps back to the **LAST CHANNEL** viewed while watching live TV. Exit also exits a Start Over/Catch Up show.
- N** The grid button jumps to the Apps & Games screen.
- O** The **NUMBER BUTTONS** make it easy to enter numbers (e.g., channel numbers or Parental Controls PIN).

Multifunction Stream TV Remote

 Buttons light up in the dark.

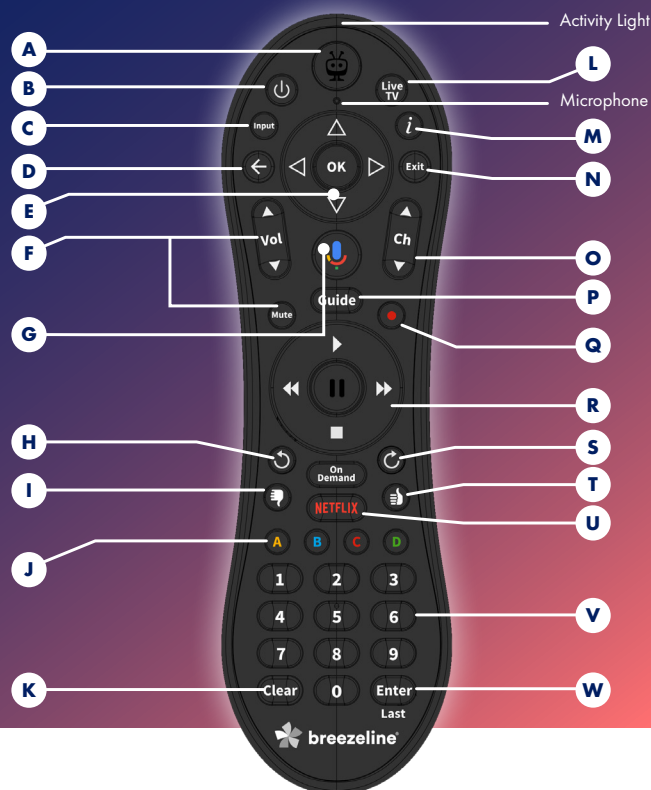

A The **TIVO BUTTON** takes you to the Home screen.

B **POWER** button turns the TV on or off.

C **INPUT** selects the input for your TV.

D **BACK** goes back to the previous screen.

E Use the **ARROW BUTTONS** when watching video:

- Press **OK** to bring up TrickPlay controls, then press **DOWN** to display the Continue Watching panel, and press **DOWN** again to display the Favorite Channels panel.
- Press **UP** to bring up the mini guide and press **DOWN** to see the full Info banner.

F **VOLUME** and **MUTE** control the volume on your TV.

G Press and release the Google Assistant button to use Voice Search.

H **REPLAY** repeats the last eight seconds of the show. In the Guide, **REPLAY** jumps 24 hours back.

I Use the **THUMBS UP** and **THUMBS DOWN** confirm certain commands, as instructed on screen.

J Use the **A, B, C, D** buttons as instructed when they are displayed on the screen.

- When watching live TV, the **A** button will turn Screen Reading on/off (if available) and the **B** button will turn Closed Captions on/off.
- When in the Guide, the **C** button will bring up Channel Options where you can change the Guide from All channels to Favorites or vice versa.

K **CLEAR** dismisses items appearing over live TV and deletes titles from My Shows and the To Do List.

L **LIVE TV** takes you to live TV.

M **INFO (i)** shows the Info banner while watching a show, or brings up an Info card when a title is highlighted in the TiVo menus. Press and hold for accessibility options.

N Use **EXIT** to switch to full-screen video while using TiVo menus, or to jump back to the last channel viewed while watching live TV. Exit also exits a Start Over/Catch Up show.

O Use **CHANNEL UP/DOWN** to change the channel or move quickly through the Guide.

P **GUIDE** takes you to the on-screen Guide.

Q Press **RECORD** to record the show you're watching, or to set up a recording for a show selected in the guide.

R Use the TrickPlay buttons (**REWIND, FAST-FORWARD, STOP, PAUSE, and PLAY**) to control video.

S **ADVANCE** jumps forward 30-seconds. In the Guide, **ADVANCE** jumps forward 24 hours.

T **ON DEMAND** jumps to the On Demand catalog.

U The **NETFLIX** button launches the Netflix app.

V Use the **NUMBER BUTTONS** to directly enter numbers (e.g., channel numbers or Parental Controls PIN).

W Press **ENTER/LAST** to jump back to the last channel viewed while watching live TV.

 
 
Installing Stream TV for the First Time (new box, new remote)

1. You should see the screen below during First Time Installation (FTI).
2. Press the TIVO button to start the pairing process.
3. The indicator light will blink amber/yellow slowly while it searches for the Stream TV box. It will then blink amber/yellow quickly 5 times when pairing is successful.



Re-pairing your Remote to your Stream TV box (existing box, existing or new remote)

1. If you change your Stream TV remote or for any reason it becomes unpaired, press the TIVO and BACK buttons simultaneously until the indicator light turns RED.
2. The indicator light will blink amber/yellow slowly while it searches for the Stream TV box. It will then blink amber/yellow quickly 5 times when pairing is successful.
3. If a list of remotes appears on the screen, use the directional pad to highlight the remote and press OK/SELECT to choose the remote and pair it.

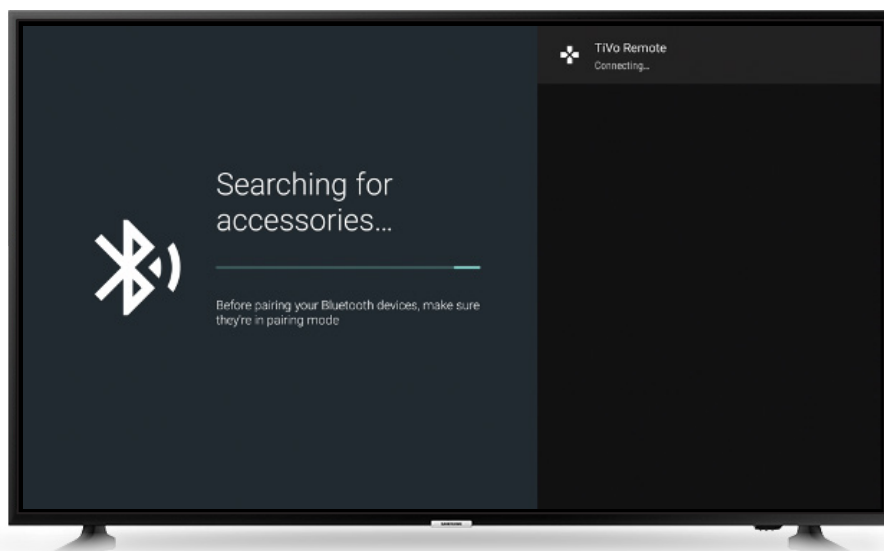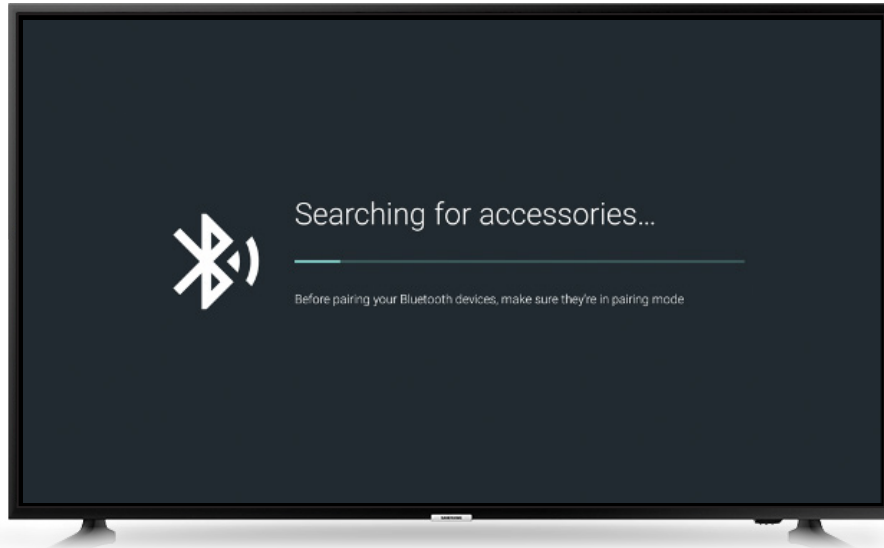

Reset & Re-Pair Your Remote

1. Press and hold the TIVO and POWER buttons on the remote simultaneously for approximately 3 seconds, until the activity light turns solid red. *Note: If you don't press the buttons exactly at the same time, you may see the activity light flash yellow or yellow/red instead. Try again after the light stops flashing.*
2. Press VOLUME DOWN three times.
3. Press the TIVO button.
4. The activity light will flash red three times.
5. Remove the batteries from the remote for at least 10 seconds.

The remote is now reset and can be paired with your Stream TV box

6. Insert the batteries into the remote.
7. Press the TIVO button to start the pairing process.
8. The indicator light will blink amber/yellow slowly while it searches for the Stream TV box. It will then blink amber/yellow quickly 5 times when pairing is successful.



Controlling your TV power and volume with your Stream TV Remote

1. Go to Menu > Settings > Remote Settings > Remote Control Programming
2. Choose "Set up TV" and choose your TV manufacturer from the list (the channel up/down buttons can be used to scroll faster)
3. Follow the on-screen instructions to begin testing code #1
4. If code #1 works, you're done! Otherwise, try additional codes until you find one that works for you

Note: If you notice odd behavior after programming the remote, you can always go back to this screen and select "No, try next code" and try a different code.

**THANKS FOR
CHOOSING BREEZELINE**



breezeline
Internet. TV. Mobile.